

Enter/Exit Configuration Mode



Recall Defaults



After any configuration change, power off the scanner before scanning the Configuration Mode bar code.

* Normal Tone



BEEPER OPTIONS

Optional Tone 1



Optional Tone 2



Optional Tone 3



Optional Tone 4



Optional Tone 5



Optional Tone 6



No Beep

